



# Frylow - Installation

## STEP 1:



Always verify the accuracy of your your deep fryer thermostat with an external deep fry thermometer.

## STEP 2:



Turn fryer off and drain the oil in the normal way. Only install Frylow in an empty fryer.

## STEP 3: Gas Fryers



**Option 1:** Vertically hang between the burners. (Or as directed by your Frylow distributor.)



BE CAREFUL OF HOT OIL



DO NOT USE TONGS



NO DETERGENTS



NO EXCESSIVE FORCE



DO NOT OPEN

## STEP 4: Electric Fryer




**Option 2:** Place Frylow under heating elements at the bottom of the fryer.

## STEP 5:



Replace/return the oil to the fryer. Make sure the Frylow is not obstructing the fryer basket(s).

## STEP 6:

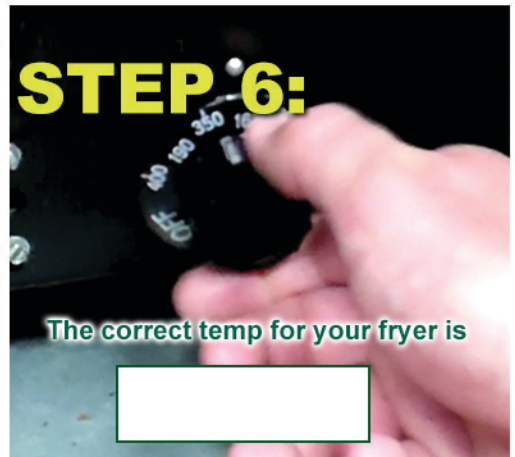

The correct temp for your fryer is

Set thermostat to desired Frylow temp & verify with an external thermometer.

